



Blind hole

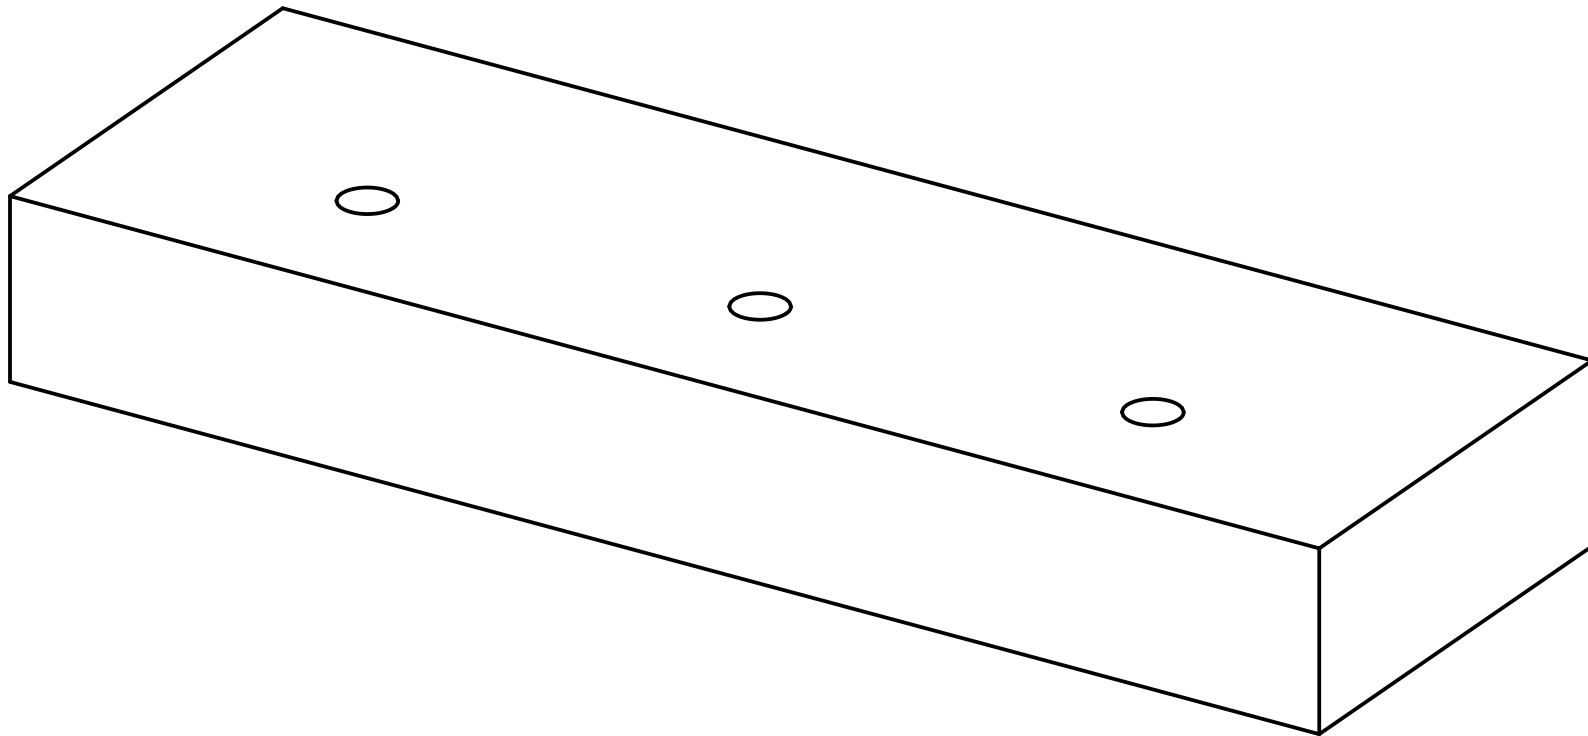


parts	1
overall	300 x 100 x 40 (W x D x H)
material	oak
date	2026-10-25
made with	woodwright 0.9.0

Contents


Drawings	3
1 board	3
Cut list	4
Appendix: source	5

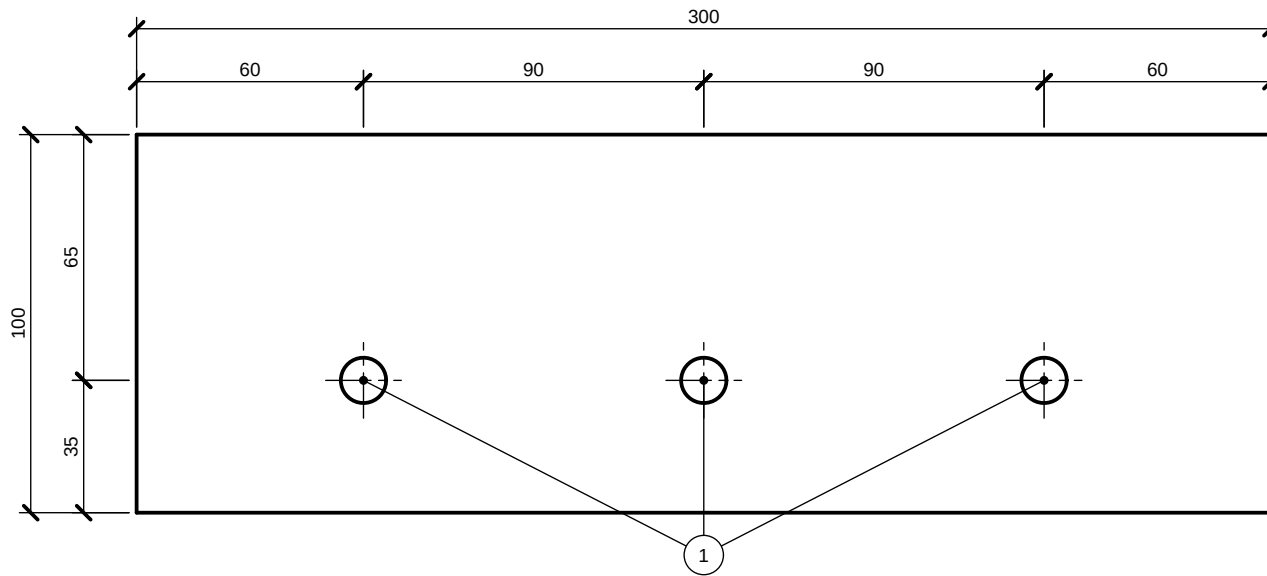

TOP FACE

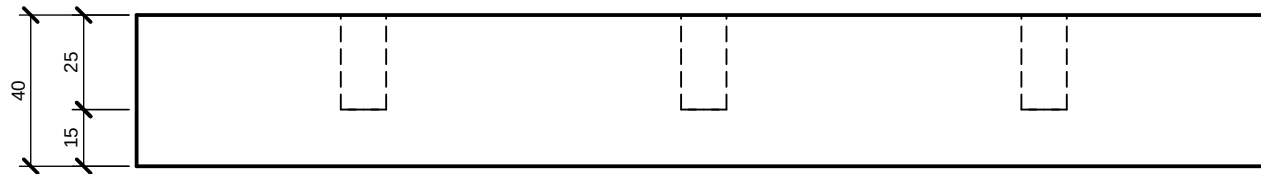

FRONT EDGE

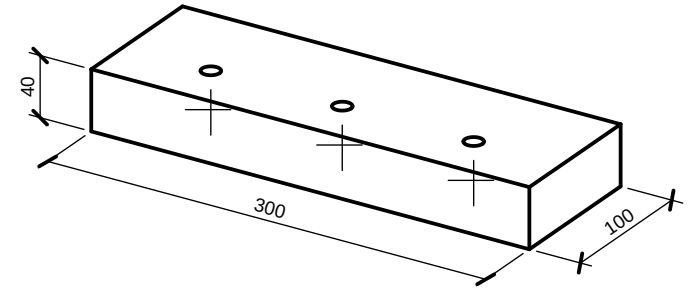

ISOMETRIC

1 3 x hole $\varnothing 12$, 25 deep, in top_face

part	board
of	blind_hole
make	1
cut size	300 x 100 x 40
material	oak
scale	1:2, mm

Cut list

board 300 x 100 x 40 mm oak
- 3 x hole $\varnothing 12$, 25 deep, in top_face, 60 to 240 every 90 from left_end; 35 from front_edge

Appendix: source

Made with woodwright 0.9.0, build123d 0.13.0, Python 3.14.4.

To make these plans again:

```
uvx --python 3.14 woodwright==0.9.0 export cuts.blind_hole
```

cuts.blind_hole, in woodwright/examples/cuts.py

```
def blind_hole(
    diameter: float = 12, depth: float = 25, point: float | None = None, stock: Stock = THICK_OAK
) -> Assembly:
    """Blind holes, flat-bottomed (Forstner, auger) or with `point`, the
    angle of a twist drill's tip, a conical point below `depth`."""
    asm, board = _board("blind_hole", stock, length=300, width=100)
    for distance in (60, 150, 240):
        at = {board.left_end: distance, board.front_edge: 35}
        board.cut(Hole(board.top_face, diameter, depth=depth, at=at, point=point))
    return asm
```